

# How to update CPS and Firmware v3

1. Install new CPS. ([Download](#))
2. Open New CPS
3. Read Radio to new CPS and **Save** Codeplug
4. Start radio in Firmware mode. (Read Documents in Download)
5. Flash New Firmware
6. Turn radio ON to let the firmware load
7. Turn radio off
8. Do MCU Reset. ([868 & 878](#)) and ([578](#))
- 9. Close CPS and re-open the CPS**
10. Send Codeplug to radio
11. If you had a custom start up picture or background pictures, send those to the radio now
12. Finally, save the Codeplug and ensure you use this saved file as the basis for any further changes you may make

That is it

You might also want to read -  
[Strange or odd things happening](#)

<http://tiny.cc/AnytoneDMR>